


Preparing the JUPITER Steam Operation:

1. Plug cable into a wall outlet. **NOTE:** Do NOT use multi-outlet power-boards and avoid using low-quality extension cables.
2. Open water tank filler cap (i), fill tank with clean tap water up to the top then close filler cap. **NOTE:** Do NOT use de-mineralised water and do NOT fill with any chemicals.
3. Turn JUPITER on using the ON/OFF switch (a). The switch should light up to indicate that it is functional.
4. Press the 'Boiler Switch' button (e) to start the boiler. The green "Pump Ready" lights will flash, indicating that the JUPITER is preparing the boiler.
5. Once the "Pump Ready" green light stops flashing and the pressure gauge (c) shows "8 bar", the steam function is ready for use.
6. Connect hose to the JUPITER by opening the protective plastic flap located on the front of the machine (iv) and pushing the plug end of the hose in with the "doman" imprint on the top side of the hose until it clicks.

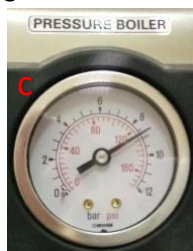

Vacuum Operation:

Locate the vacuum switch (S) on the vacuum head unit (iii) and turn it on.



NOTE: The vacuum bucket can be cleaned by detaching the bucket from the vacuum head through the latch that holds it. Always make sure the bucket is fitted properly to ensure that the contents will not disperse to your surroundings.

Detergent Operation:

1. Open detergent tank filler cap (ii), fill tank with detergent. **NOTE:** We recommend using Steam Australia's 101 degreaser or similar to ensure it does not impact machine operation and/or cause adverse health issues.
2. Replace the detergent filler cap (ii) before operating.



Proceed to "Vacuum Operation" and/or "Detergent Operation" section if you are planning on using the vacuum and/or detergent functions together with the steam functions.

Hose Handle Operations

Steam Function:

1. After approx. 8-10 minutes, check that the pressure gauge reaches "7.5 bar".
2. If the JUPITER makes a beeping noise and the "Tank Level" LED (b) flashes, proceed to Step 2 of "Preparing the JUPITER | Steam Operations" (page 1).
3. For S/V Hose, press and hold the trigger (T) to activate the steam function. For S/O Hose, toggle the steam on/off switch (m) to on to activate an automatic stream.
4. Adjust the steam level from the knob (g). Turning counter-clockwise will increase steam level, turning clockwise will decrease it.

WARNING: Do NOT operate hose with steam nozzle pointing at persons, animals or electrical machinery /equipment/outlets/sensors that are sensitive to water and heat (especially near fire alarm sensors).

Vacuum Function:

1. Plug the S/V Hose into the JUPITER.
2. Press the vacuum button (h) to engage the vacuum function. The vacuum will turn on and you will feel suction from the vacuum nozzle.

NOTE: Ensure that you regularly empty out the contents of the vacuum waste bucket for a smooth operation and clean the HEPA filter located under the vacuum head inside of the bucket if it is very stained. Use soapy warm water to wash the HEPA filter, rinse and let dry before re-installing.

Detergent Function:

1. Press and hold the detergent button ((k) for S/V Hose, (n) for S/O Hose) to activate the detergent function.
2. Turning the detergent level knob (f) counter-clockwise will increase the amount of detergent sprayed, turning the knob clockwise will decrease it.
3. If the detergent runs low in the JUPITER, the hoses will stop spraying detergent. This is noticeable when

using the steam function in conjunction with the detergent function as only the drier steam sprays out the nozzle when the detergent function is activated.

Proceed to Step 1 – 3 of "Preparing the JUPITER | Detergent Operation" (page 1) if this happens.

Warning Lights

The JUPITER will make a beeping noise and the "Tank Level" (b) red LED light will flash when the water tank's level is low.

For water tank low level, refer to Step 2 of "Preparing the JUPITER | Steam Operations" (page 1).

Cleaning the JUPITER

Draining the JUPITER's boiler once a month ensures that the machine operates at optimal performance.

WARNING: Ensure machine has cooled down before attempting to clean out the boiler by checking that the machine doesn't feel warm on the bottom part and machine is free from any pressure.

You will need:

- A pan or container that can hold at least 5 litres of water
- A rag
- 8mm Allen Key

1. Ensure the machine isn't plugged into a power source and the machine doesn't feel warm (no pressure present).
2. Locate the stainless steel boiler plug underneath the JUPITER and position the JUPITER on top of a pan or container.
3. Using the 8mm Allen key, unscrew the boiler plug by slowly turning counter-clockwise. You may need to use a rag to hold the plug as you unscrew the plug by hand after loosening using the socket wrench. Let the water drain, then screw the plug back on and tighten with supplied socket wrench.

Floor Tool (Steam + Vacuum)

		<p>KIT0804 Floor Brush 300mm</p>	<p>For hard floor surfaces such as:</p> <ul style="list-style-type: none"> - Tiles - Marble - Most sealed hardwood - Linoleum & Vinyl - Carpets - Non-slip surfaces
		<p>KIT0822 Teflon Carpet Insert</p>	
		<p>KIT0824 Rubber Lip Insert</p>	<p>First, use high steam pressure to lift dirt off the floor. Then disengage the steam and turn on the vacuum to suck the floor dry.</p>
		<p>2 x KIT0801 Extension Tube S/V 500mm</p>	
		<p>KIT0800/MOD S/V Hose 4M</p>	<p>Whenever the vacuum motor is turned on, the steam boiler loses some of its power and will take longer to produce 7.5 bars of pressure.</p>



Triangular Brush (Steam Only)

		<p>KIT0709 Triangular Brush with bristles</p>	<p>For cleaning skirting boards, kitchen benchtops, underneath kitchen cabinets, rangehoods, car interior and other areas.</p>
		<p>KIT0706 Joint for brushes</p>	
		<p>KIT0700 S/O Hose 4M</p>	<p>Wrap the triangular brush with a microfibre cloth to steam clean upholstery and other surfaces.</p>
		<p>Microfibre Cloth</p>	










Detailing Extension (Steam Only)

	 <p>KIT0703 Steam Lance 100mm</p>  <p>KIT0704 Steam Lance 250mm</p>  <p>KIT0700 S/O Hose 4M</p>	<p>For cleaning and sanitizing areas such as:</p> <ul style="list-style-type: none"> - Sinks - Toilets - Car interior & exterior - Hard to reach nooks & crannies <p>This tool is also available for the KIT0800/MOD Steam + Vacuum hose:</p> <p>KIT0808/DA/X – S/V lance short KIT0808/DA350/X – S/V lance long 350mm</p>
---	--	--

Squeegee (Steam Only)

	 <p>KIT0711 Steam Squeegee</p>	<p>Spray a stream of steam in a circular motion onto the glass surface, then use the rubber squeegee part to remove water condensation and clean the surface.</p> <p>If using in areas with frosty climates, warm the windows or mirrors by spraying a high stream of steam for a slightly prolonged time before cleaning.</p> <p>This tool is also available for the KIT0800/MOD Steam + Vacuum Hose:</p> <p>KIT0805 S/V Squeegee 300mm</p>
---	---	--




Detailing Extension + Small Nylon Brush (Steam Only)

		<p>KIT0703 Steam Lance 100mm</p>	<p>For detail cleaning in kitchens, bathrooms and other areas:</p>
		<p>2 x KIT0701 S/O Extension Tube 500mm</p>	<ul style="list-style-type: none"> - Tile grouts (walls and floors) - Drains - Cooktops - Bathtubs - Roadside chewing gum removal
		<p>KIT0700 S/O Hose 4M</p>	<p>For best results, hold brush on angle to clean sides of the grout line, and then tilt in other direction to clean the other side of the grout line.</p>
		<p>KIT0816/N Small Brush w/ nylon bristles</p>	<p>Optional stainless steel and/or brass brushes can be fitted onto the detailing nozzle to scrub off certain hard-to-remove stains in nooks and crannies. Stainless steel is particularly effective on grout and chewing gum stains.</p>
		<p>KIT0816/I Small Brush w/ Stainless Steel bristles</p>	<p>Be wary that the stainless steel and brass brushes may scratch certain surfaces, leaving unwanted scratch marks. Always test areas in an inconspicuous spot before proceeding.</p>
	<p><i>Optional Accessories:</i></p>		
		<p>KIT0816/O Small Brush w/ Brass bristles</p>	<p>This tool is also available for the KIT0800/MOD Steam + Vacuum hose:</p>
		<p>KIT0814/O Big Round Brush w/ Brass bristles</p>	<p>KIT0808/DA/X – S/V lance short KIT0801 – Extension Tube S/V 500mm</p>
			<p>The brushes fits both S/V and S/O lances.</p>

Floor Mop Head + Microfibre Mop Pad (Steam Only)

		<p>KIT0714 Steam Mop 400mm</p>	<p>For cleaning non-carpeted hard-floor surfaces.</p>
		<p>KITQ706 Microfibre Mop Pad 400mm</p>	
		<p>2 x KIT0701 S/O Extension Tube 500mm</p>	<p>Engage steam flow and move forwards and backwards quickly over the floor surface.</p>
		<p>KIT0706 Joint for brushes</p>	
		<p>KIT0700 S/O Hose 4M</p>	

Car Wash Upholstery Tool (Steam + Vacuum) (Optional Tool)

		<p>KIT0806/CW Car Wash Upholstery Tool</p>	<p>The optional KIT0800/CW6M Hose features a shorter handle grip that gives an easier access for use in car detailing jobs. When used in conjunction with the KIT0806/CW upholstery tool, it is the best tool combination for cleaning interior carpets, mats, roof linings and fabric car seats.</p>
		<p>KIT0800/CW6M S/V Hose Car Wash 6M (short grip)</p>	<p>Turn on the vacuum. Squeeze the steam trigger and vacuum at the same time by dragging the tool towards you in a straight line. Let go of the steam trigger when you are finished with one line and repeat the previous step by starting on a new straight line. Best used with the detergent function.</p>