



SW9



SW9 Display



SW9 Hose Controls

Preparing the SW9

1. Plug cable into a wall outlet. **NOTE:** Do NOT use multi-outlet power-boards and avoid using low-quality extension cables.
2. Open filler cap (i.), fill tank with clean tap water up to the top then close filler cap. **NOTE:** Do NOT use demineralised water.
3. Turn SW9 on using the black ON/OFF switch (iii.).
4. Connect hose into the SW9 by opening the protective plastic flap located on the front of the machine (ii.) and pushing the plug end of the hose in with the round red button on the top side of the hose until it clicks.
5. Wait until the pressure gauge (iv.) reaches “8.5” bar or the yellow ‘Steam Ready’ (v.) LED lights up on the display.

Steam Operation – Hose Handle

Steam levels can be selected using the rotative switch located on the hose handle (vii.).

Switch Position	Steam Level	Display Lights
1 + Trigger(viii.)	Low	Light 1 On
2 + Trigger(viii.)	Medium	Light 2 On
3 + Trigger(viii.)	High	Light 1 + Light 2 On
4 + Trigger(viii.)	Water Injection	Light 1 + 2 + 3 On

Note: Using the hot water injection continuously will quickly drain the water tank, therefore it is advised that the hot water injection function is to be used only when cleaning hard to remove stained areas.

WARNING: Do NOT operate hose with steam nozzle pointing at persons, animals or electrical machinery/equipment/outlets/sensors that are sensitive to water and heat (for example fire alarm sensors).

Warning Lights

The SW9 will make a beeping noise and a green LED light will flash on the display when the water tank is empty (v.). Follow Step 2 on “Preparing the SW9”, fill the tank with water and the flashing lights will disappear.

Cleaning the SW9

Draining the SW9’s boiler once a month ensures that the machine operates at optimal conditions.

WARNING: Ensure machine has cooled down before attempting to clean out the boiler by checking that the pressure gauge is at 0 bar and the machine doesn’t feel warm on the bottom part.

You will need:

- A pan or container that can hold at least 5L of water
- A rag
- Flathead screwdriver
- Supplied socket wrench

1. Ensure the machine isn’t plugged into a power source, the pressure gauge shows “0” bar and the machine doesn’t feel warm (no pressure present).
2. Using a flathead screwdriver, remove the black plastic cover concealing the boiler drain plug located underneath the SW9 by inserting the screwdriver into the slit and turning counter-clockwise.
3. Once the brass boiler plug is exposed, prepare the SW9 by positioning it on top of a pan or container.
4. Using the supplied socket wrench, unscrew the boiler plug by slowly turning clockwise. You may need to use a rag to hold the plug as you unscrew the plug by hand after loosening using the socket wrench. Let the water drain, then screw the plug back on and tighten with supplied socket wrench.

BEFORE USE PLEASE VIEW:

